


TrustLink Metal Shell Connector

BCR - assembly instruction

Note:
For use in dry box configuration.
If used in PBOF configuration,
contact MacArtney.

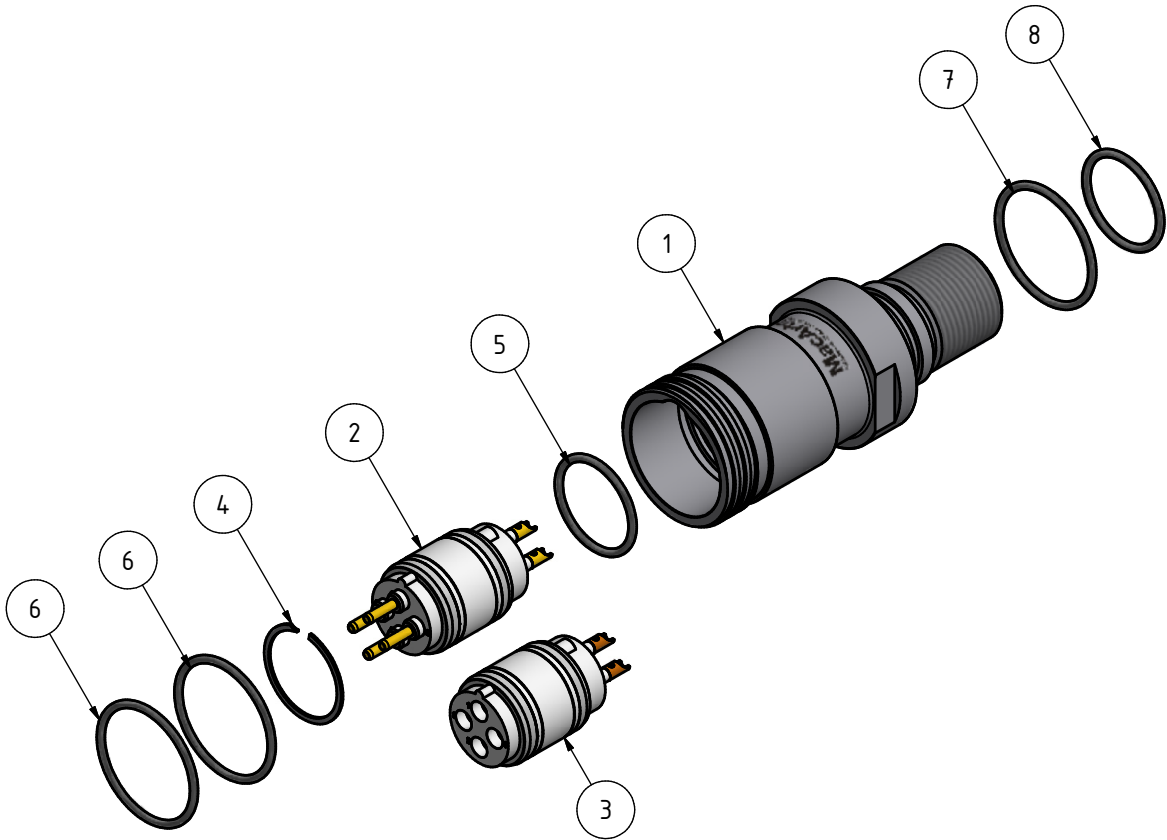

MacArtney
UNDERWATER TECHNOLOGY

- **O-rings greased with MOLYKOTE® 111**
- **O-rings must not be exposed to sunlight**
- **Type of heat shrink to be used on all solderings:**
Hellermann Tyton TF 31 3mm BK Black

Important:
Male connectors shall not be energised while unmated.
Energising in unmated condition causes a significant health risk due to electrical shock or short circuit due to the potential risk of flashover pin to pin or pin to housing.


	BCR Housing	Male Insert kit		Female Insert kit		O-ring kit	
SA 04 Pin	1) 0024730601-032	Kit no.: 100005413	2) Insert 02961001 4) Circlips XVHM-19 100006662 5) O-ring 08350109 (ø17.5x1.5 FPM75)	Kit no.: 100005424	3) Insert 2961002 4) Circlips XVHM-19 100006662 5) O-ring 08350109 (ø17.5x1.5 FPM75)	Kit no.: 100005300	4) Circlips XVHM-19 100006662 5) O-ring 08350109 (ø17.5x1.5 FPM75) 6) O-ring 08350112 (ø22.5x1.5 FPM-75) 7) O-ring 08350112 (ø22.5x1.5 FPM-75) 8) O-ring 08350109 (ø17.5x1.5 FPM75)
SA 08 Pin		Kit no.: 100005425	2) Insert 02961003 4) Circlips XVHM-19 100006662 5) O-ring 08350109 (ø17.5x1.5 FPM75)	Kit no.: 100005426	3) Insert 2961004 4) Circlips XVHM-19 100006662 5) O-ring 08350109 (ø17.5x1.5 FPM75)		
SA 12 Pin		Kit no.: 100005427	2) Insert 02961005 4) Circlips XVHM-19 100006662 5) O-ring 08350109 (ø17.5x1.5 FPM75)	Kit no.: 100005428	3) Insert 2961006 4) Circlips XVHM-19 100006662 5) O-ring 08350109 (ø17.5x1.5 FPM75)		
SB 16 Pin	1) 0024730601-035	Kit no.: 100005429	2) Insert 02961007 4) Circlips XVHM-20 100006663 5) O-ring 08350110 (ø18.5x1.5 FPM75)	Kit no.: 100005430	3) Insert 02961008 4) Circlips XVHM-20 100006663 5) O-ring 08350110 (ø18.5x1.5 FPM75)	Kit no.: 100005301	4) Circlips XVHM-20 100006663 5) O-ring 08350110 (ø18.5x1.5 FPM75) 6) O-ring 08350112 (ø22.5x1.5 FPM-75) 7) O-ring 08350113 (ø27.0x1.5 FPM-75) 8) O-ring 08350111 (ø20.5x1.5 FPM-75)
SB 19 Pin		Kit no.: 100005431	2) Insert 02961009 4) Circlips XVHM-20 100006663 5) O-ring 08350110 (ø18.5x1.5 FPM75)	Kit no.: 100005432	3) Insert 02961010 4) Circlips XVHM-20 100006663 5) O-ring 08350110 (ø18.5x1.5 FPM75)		
SC 26 Pin	1) 0024730601-036	Kit no.: 100005433	2) Insert 02961011 4) Circlips XVHM-24 100006664 5) O-ring 08350112 (ø22.5x1.5 FPM-75)	Kit no.: 100005434	3) Insert 02961012 4) Circlips XVHM-24 100006664 5) O-ring 08350112 (ø22.5x1.5 FPM-75)	Kit no.: 100005302	4) Circlips XVHM-24 100006664 5) O-ring 08350112 (ø22.5x1.5 FPM-75) 6) O-ring 08350114 (ø27.5x1.5 FPM-75) 7) O-ring 08350117 (ø29.0x1.5 FPM-75) 8) O-ring 100015702 (ø24.5x1.5 FPM-75)
SC 37 Pin		Kit no.: 100005435	2) Insert 02961013 4) Circlips XVHM-24 100006664 5) O-ring 08350112 (ø22.5x1.5 FPM-75)	Kit no.: 100005436	3) Insert 02961014 4) Circlips XVHM-24 100006664 5) O-ring 08350112 (ø22.5x1.5 FPM-75)		

TrustLink
Metal Shell Connectors

TrustLink Metal Shell Connectors Handling instructions

Follow these instructions carefully to ensure correct use of your TrustLink connector.

Assembly

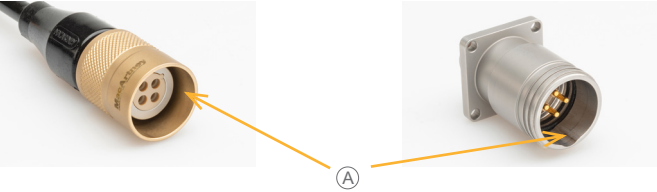


TrustLink CCP to FCR, BCR receptacle

- Step 1: Inspect the connector metal parts and O-rings for contamination. Grease the O-rings with MOLYKOTE® 111
- Step 2: Inspect the connector insert. If the connector insert is contaminated, follow the TrustLink MS maintenance
- Step 3: Visually align the key way on the CCP connector with the key pin tip on the receptacle **before** mating (illustration A)
- Step 4: Push to mate the connector, whilst turning the locking sleeve
- Step 5: The locking sleeve must be hand tightened only

Maintenance

- If the connector insert or O-rings are contaminated. Cleaning and removal of any accumulated contamination on a connector, should be performed by using spray based contact cleaner (isopropyl alcohol)
- Repeat the cleaning process if necessary
- O-rings item 1, 2, 3, 4 must be checked before mating/mounting and will require replacing if they show signs of damage
- Sizes of O-rings can be found in the assembly instructions on our webpage

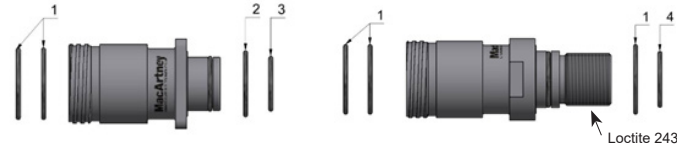

- Always grease O-rings with MOLYKOTE® 111
- For securing the BCR connectors and nut, the use of LOCTITE® 243 is recommended (LOCTITE® 243 or equivalent)
If the torque is less as recommended, always use LOCTITE® 243
- Be careful not to get the LOCTITE® 243 on the O-rings

Recommended torque on Bulkhead TrustLink MS (LOCTITE® 243 applied)

Type	Material	Rec. Torque – Nm
¾" - 20 UNF	Stainless steel, brass	52 ± 2
7/8" - 20 UNF	Stainless steel, brass	71 ± 2
1" - 20 UNF	Stainless steel, brass	92 ± 2

The TrustLink Metal Shell series is rated to 600 bar mated.

NOTE:

When dismantling the CCP, vacuum may accrue in the connector. It can cause water from above the O-rings, to migrate in to the connection area. If that accrues, run the maintenance instruction.

